



GLIDE CARE WALL HUNG CERAMIC BASIN RIGHT HAND BOWL




Specifications & Data

SIDE VIEW



TOP VIEW

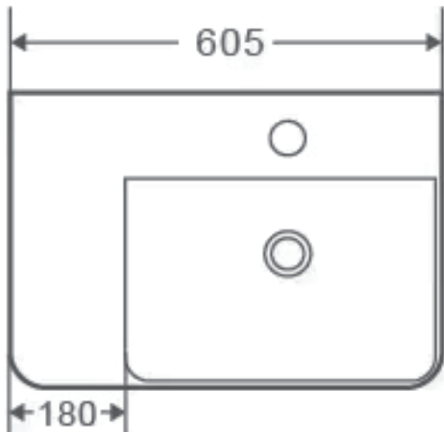

Model: 2223R

Drop In Basin
Size: 605 x 430 x 125mm

Tap Hole: One

Bowl Capacity: 6L

Finish Colors: Gloss White

Over Flow: Yes

Fixing: Waste & Bracket

Dimension: All dimensions are in millimeters and are subject to normal manufacturing variations.

Zumi Bathware pursues a policy of continuing improvement in design and performance of its products.

The right is therefore reserved to vary specifications without notice.



2223R

INSTALLATION INSTRUCTIONS



Great Services, Great Design, Great Product

Wall-hung Basin





Prior to Installation:

- Inspect toilet to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Additional floor and wall preparations may be necessary to avoid damage to the product.


General Recommendations: Read installation and maintenance instructions thoroughly before installing the basin. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

Wall-hung Basin


INSTALLATION INSTRUCTIONS

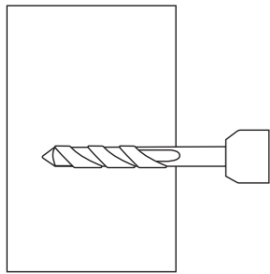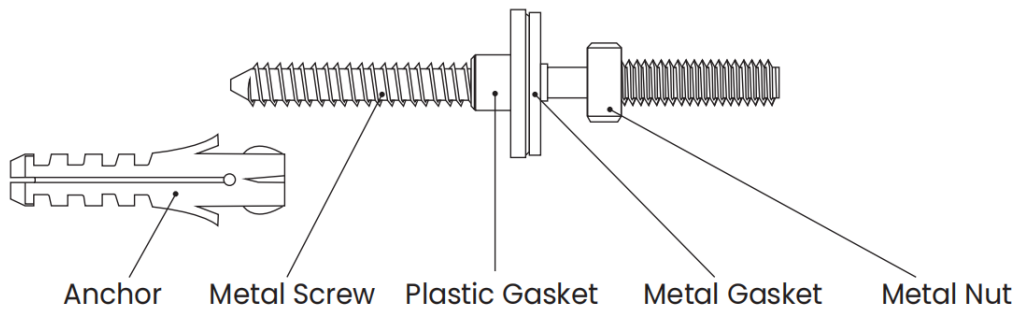


1. Drill two holes in the required position on the wall using a 14 mm masonry drill bit, to a depth of 75 mm.

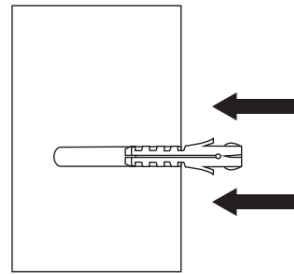


2. Push an anchor into each hole.

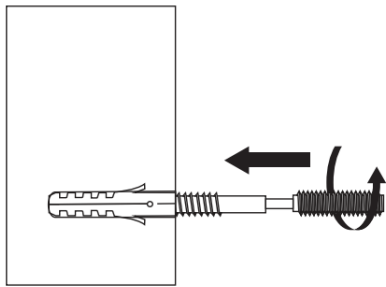


3. Screw a fixing bolt into each fixing plug using a 8 mm spanner until the spanner contacts the wall.

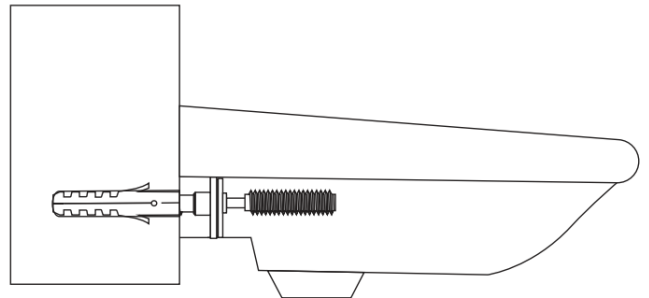

4. Place the basin in position against the wall. Locating the fixing bolts through the holes in the rear of the basin. Push a plastic washer followed by a metal washer, onto each fixing bolt.

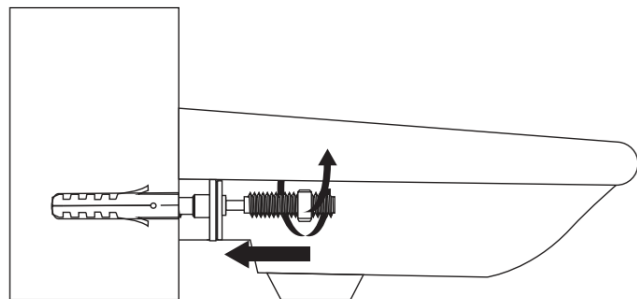

5. Screw a metal nut onto each fixing bolt to secure the basin. Do not overtighten, as this may damage the ceramic.

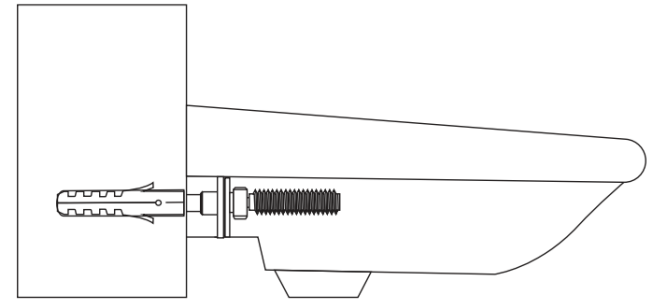

6. Ensure sink it secure, tighten bolts if necessary. Install faucet and drain using manufacturer's instructions.

NOTE: These fixings are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings (not supplied).
CAUTION: Care should be taken when drilling walls and floors to avoid any concealed wires or pipes.